


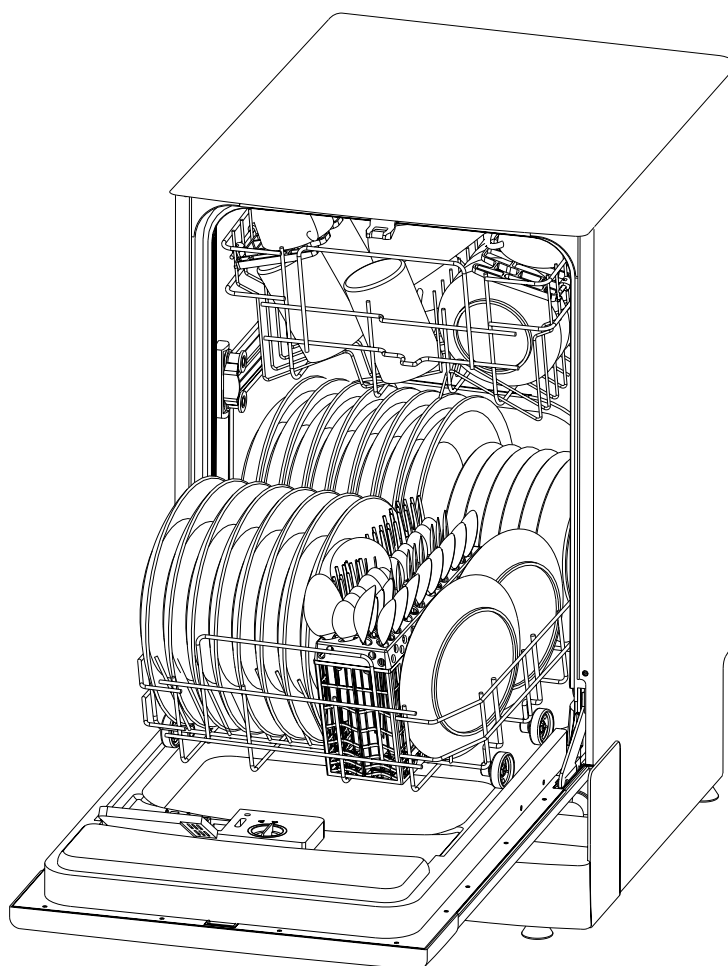

Installation Manual

WQP8-9117

Dishwashers




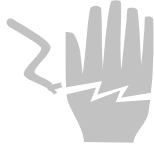
● Notes

Carefully read this manual before installation

Reading this manual will help to understand the connections of inlet, drain hoses and power cord, and to find a optimal position for the dishwasher.

Attention:

The installation of the pipes and electrical equipments should be done by professionals.

 Warning	
	<p>Electrical Shock Hazard Disconnect electrical power before installing dishwasher.</p> <p>Failure to do so can result in death or electrical shock.</p>

● Installation preparation

The installation position of dishwasher should be near the existing inlet and drain hoses and power cord.

One side of the cabinet sink should be chosen to facilitate the connection of drain hoses of the dishwasher.

Note: please check the accompanying installation accessories(hook for aesthetic panel ,screw)

● Installation instruction

Please carefully read the installation instruction.

- Illustrations of cabinet dimensions and installation position of the dishwasher


Preparations should be made before moving the dishwasher to the installation place.

1 Choose a place near the sink to facilitate the installation of inlet and drain hoses (see figure 1).

2 If dishwasher is installed at the corner of the cabinet, there should be some space (illustrated in figure 2) when the door is opened.


【 Figure1 】

Cabinet dimensions
Less than 5mm
between the top
of dishwasher and
cabinet and the
outer door aligned
to cabinet.

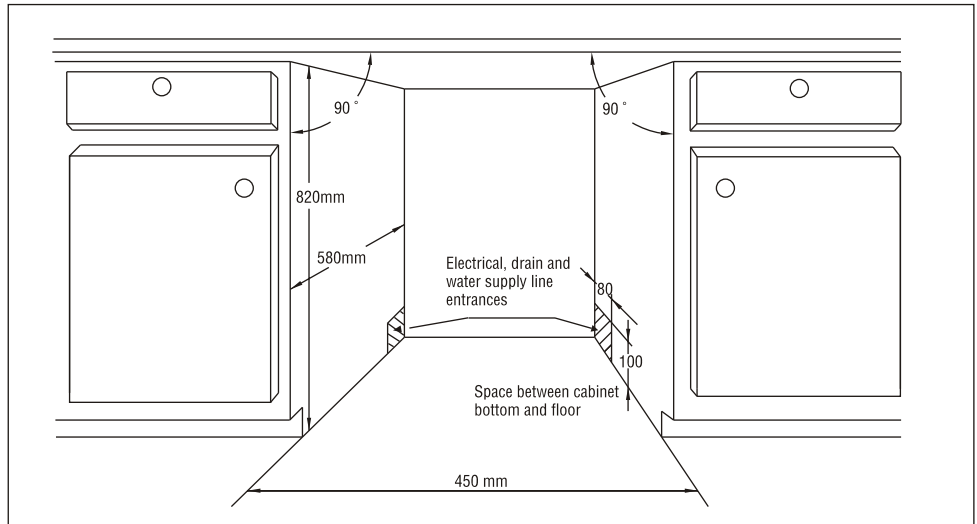


【 Figure2 】

Minimum space when
the door is opened

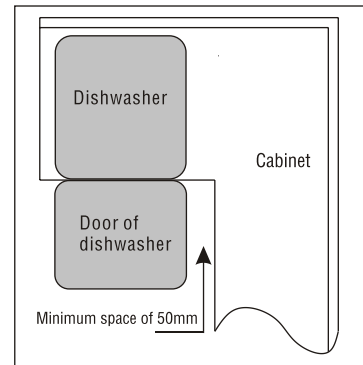

● Aesthetic panel's dimensions and installation


1 The aesthetic wooden panel could be processed according to the figure 3

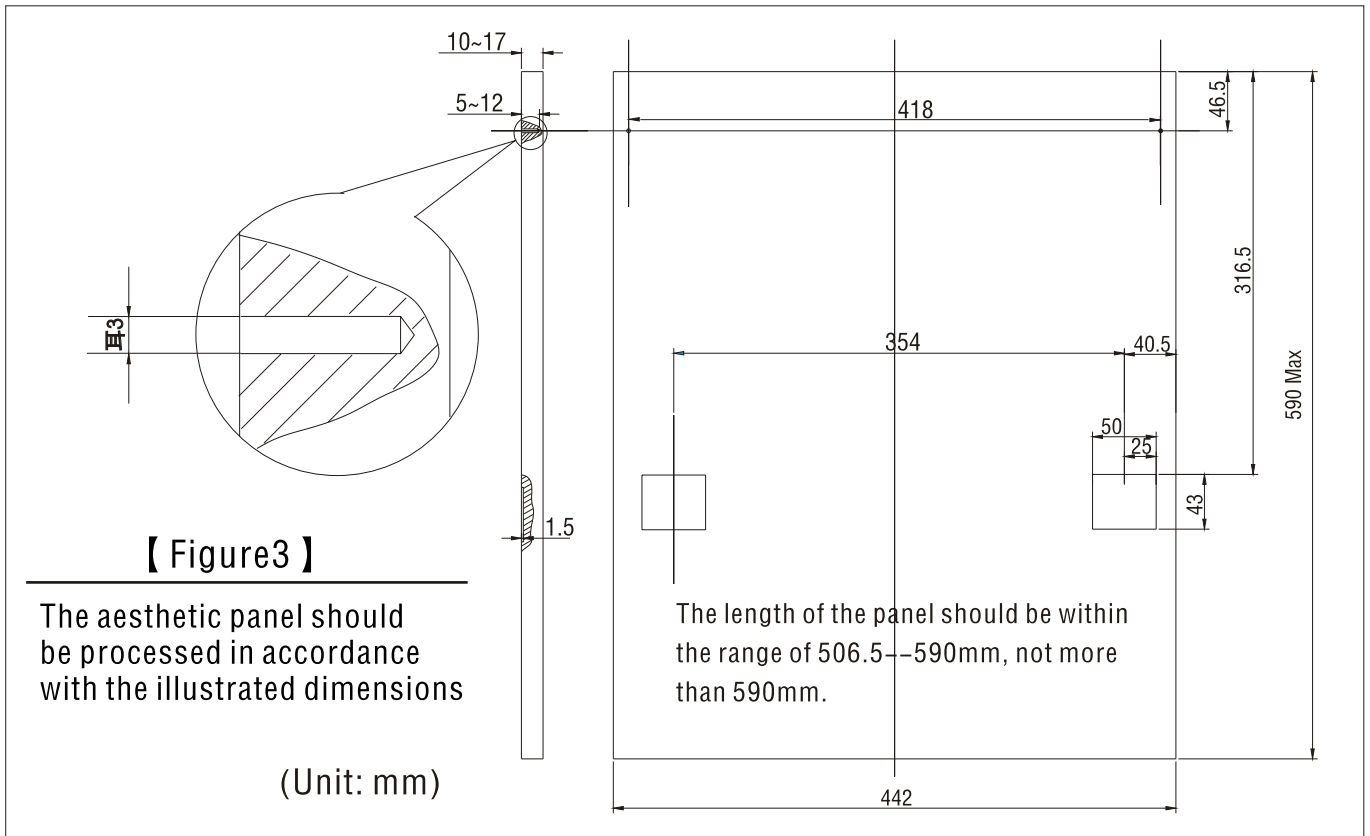

2 Install the hook on the aesthetic wooden panel and put the hook into the slot of the outer door of dishwasher(see figure 4a). After positioning of the panel , fix the panel onto the outer door by screws and bolts(See figure 4b) .

【 Figure4a 】


Installation of aesthetic panel

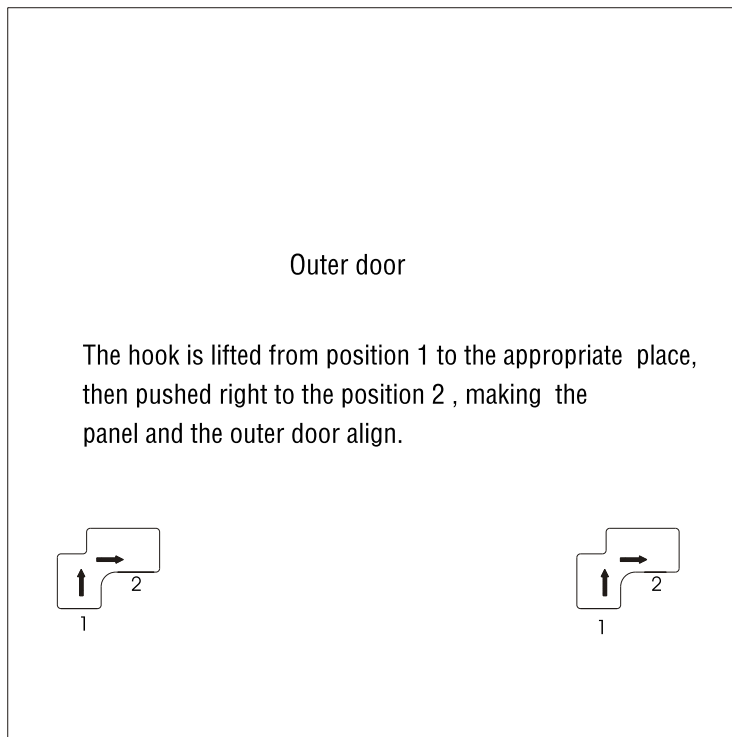

【 Figure4b 】

Installation of aesthetic wooden panel

1. Take away the cover
2. pin up the screw
3. get back the cover

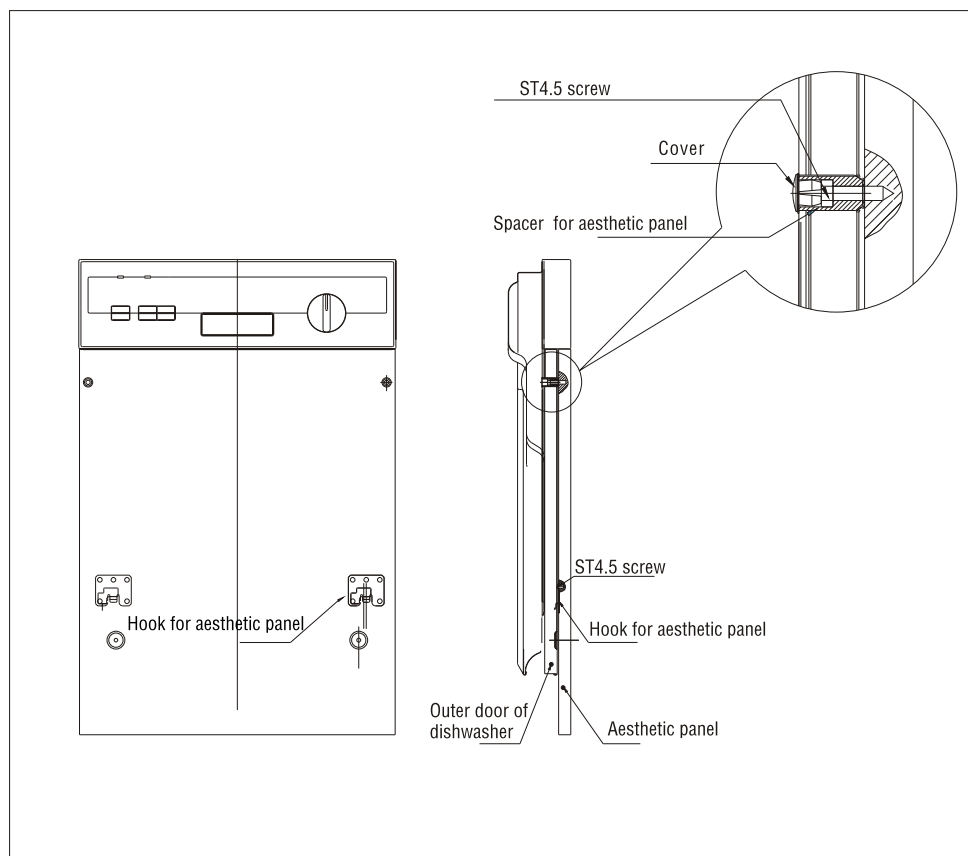


● Tension adjustment of the door spring

The door springs are set at the factory to the proper tension for the outer door. If aesthetic wooden panel are installed, you will have to adjust the door spring tension. Rotate the adjusting screw to drive the adjustor to strain or relax the steel cable(see figure 5).

Door spring tension is correct when the door remains horizontal in the fully opened position, yet rises to a close with the slight lift of a finger.

【 Figure5 】

Tension adjustment
of the door spring

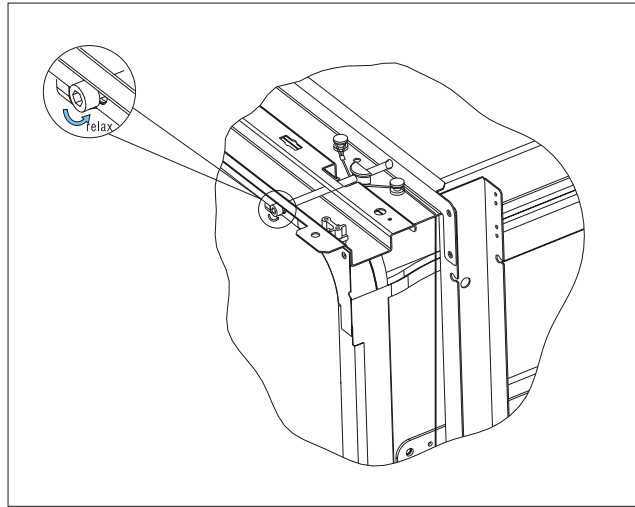

● Connection of drain hoses

Insert the drain hose into a drain pipe with a minimum diameter of 4cm, or let it run into the sink, making sure to avoid bending or crimping it. Use the special plastic support that comes with the appliance (figure 6). The free end of the hose must be at a height between 400 and 1000mm and must not be immersed in water to avoid the back flow of it. **ATTENTION:** The special plastic hose support must be solidly fastened to the wall to prevent the drain hose from moving and allowing water to spill outside the drain.


【 Figure6 】

Drain pipe connection

Drain hose hook

Max 1000mm
Min 400mm


φ 40mm

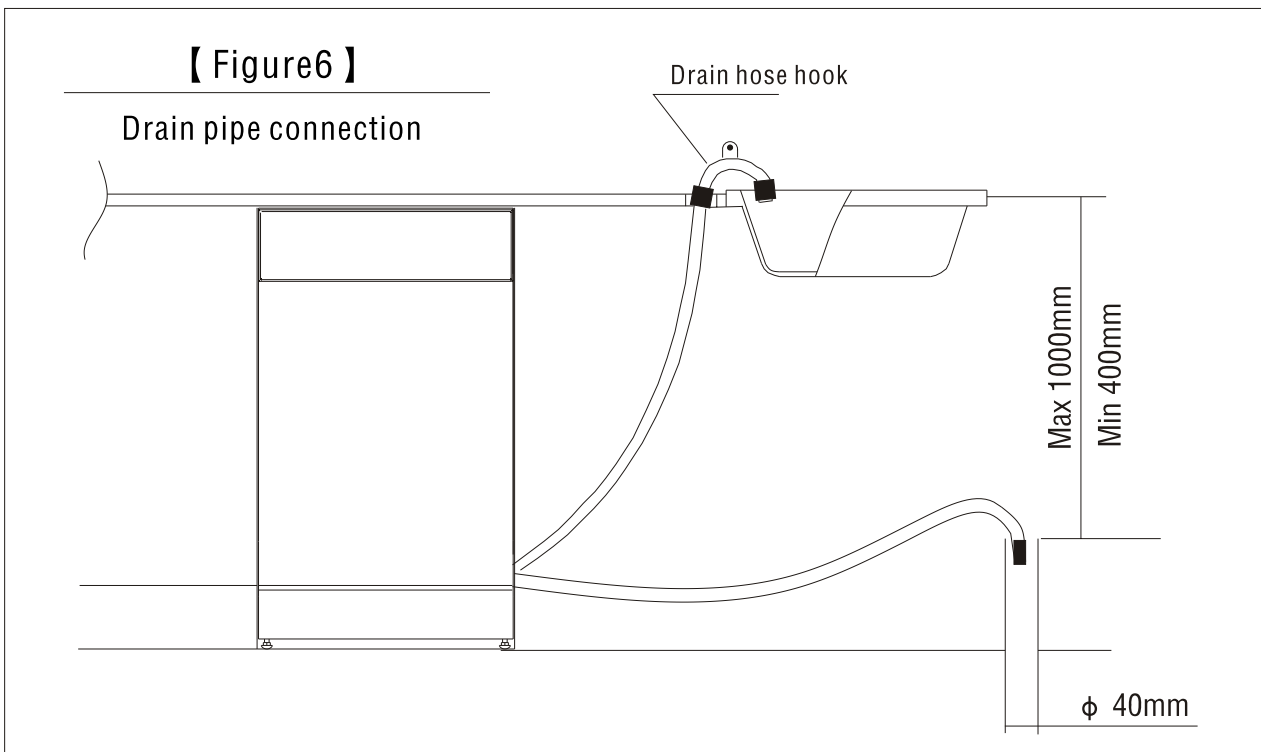

● Dishwasher installation steps

- 1 Install the aesthetic pannel on the outer door of the dishwasher.
- 2 Adjust the tension of door spring.
- 3 level the dishwahser and touch the cabinet by adjusting the four leveling legs individually.
- 4 Connect the inlet, and drain hoses, and power cord .
- 5 pushing the dishwasher into the cabinet.
- 6 fixing the dishwasher into the cabinet by two countersunk head screw.

According to the arrow illustrated figure 7, adjust the feet to rise or low down the dishwasher and keep it level.

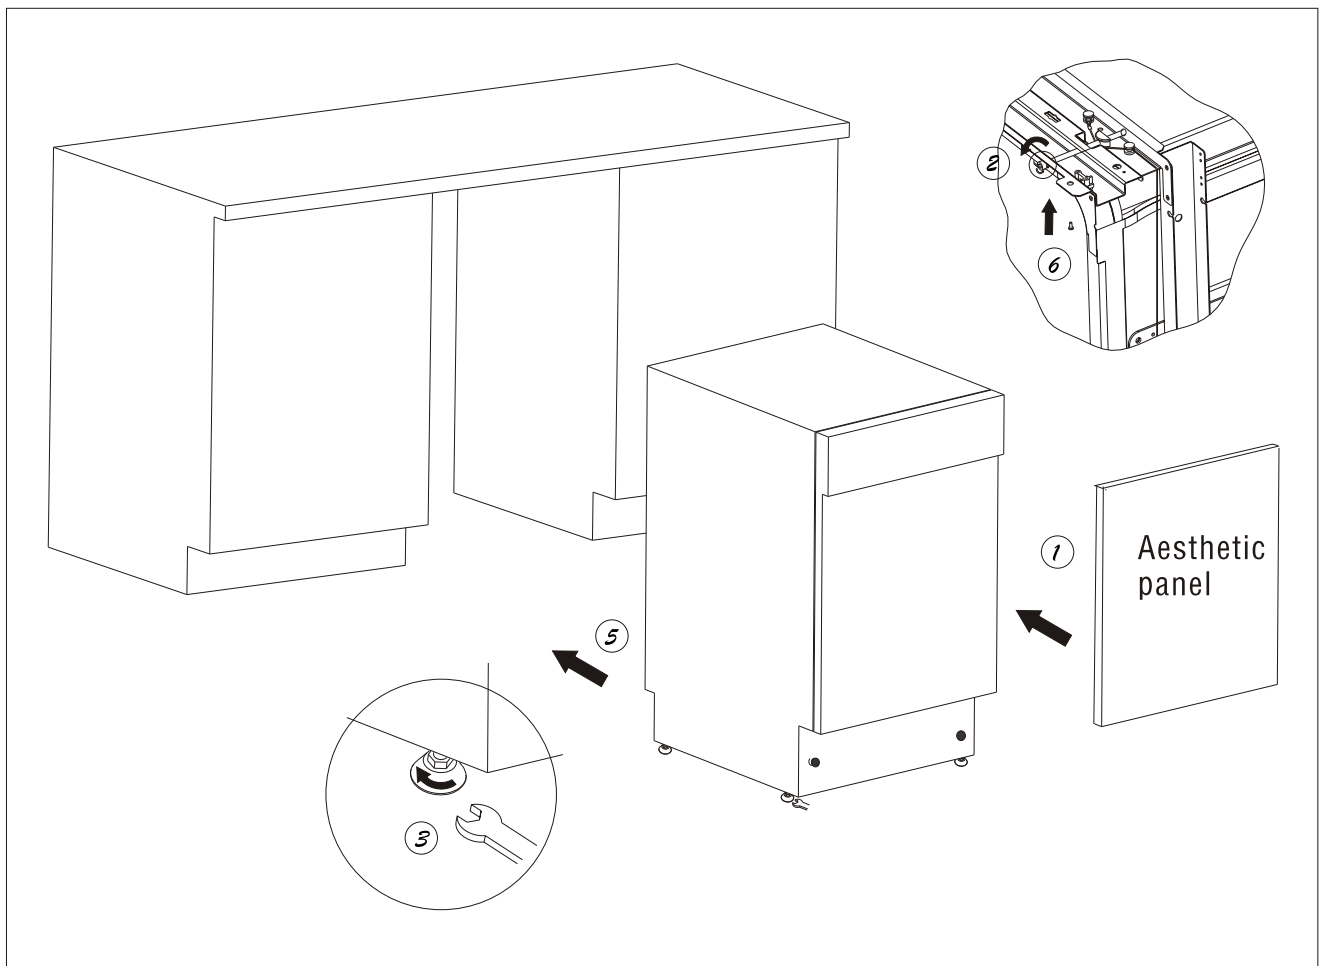

【 Figure 6 】


Installation steps

Dishwasher must be level for proper dish rack operation and wash performance.

- 1 Place level on door and rack track inside the tub as shown to check that the dishwasher is level.
- 2 level the dishwasher by adjusting the four leveling legs individually.
- 3 When level the dishwasher, pls. pay attention not to let the dishwasher tip over.

【 Figure 7 】

Illustration of feet adjustment

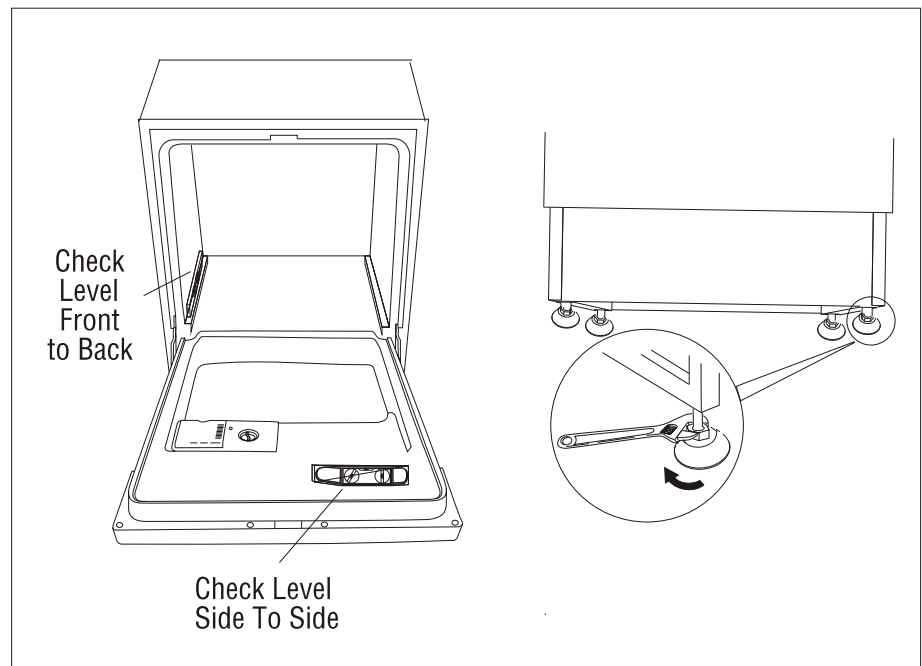

● Start of dishwasher

The followings should be checked before starting the dishwasher.

- 1 Whether the dishwasher is level and fixed
- 2 Whether the inlet valve is opened
- 3 Whether there is leakage at the connections of the conducts
- 4 Whether the wires are tightly connected
- 5 Whether the power is switched on
- 6 Whether the inlet and drain hoses are knotted
- 7 All packing materials and printings should be taken out from the dishwasher

● Attention

After installation, please put this installation manual into the bags of printings. The content of this manual is very helpful to the users.

NOTE: The manufacturer, following a policy of constant development and up-dating of the product, may make modifications without giving prior notice.